



1221

Push button/lightsignal E10

Description	P.U.	Cat ref.
LENS CLEAR GLASS-SERIES	10	1221
LENS CLEAR GLASS-SERIES	10	1222
BUTTON NEUTRAL "GLASS"	10	1225
BUTTON GLAS/PALAZZO/1930	10	1226
BUTTON GLAS/PALAZZO/1930	10	1227
BUTTON RED GLASS-SERIES	10	1229
MOM.CONT.SW./PILOT LAMP	1	5104
BUTTON BROWN GLASS-SERIES	10	122501
KNOB F.PUSHB. TRANSPARENT	10	122902
MOM.CONT.SW./PILOT LAMP	1	510401



283410

Rotary dimmer with cover plate

Description	P.U.	Cat ref.
Universal Rotary Dimmer Polar White	1	283410
Universal Rotary Dimmer Black Glossy	1	283411
Universal Rotary Dimmer Ext Polar White	1	283510
Universal Rotary Dimmer Ext Black Glossy	1	283511
Universal Rotary Dimmer, Black Glossy	1	28342045
Universal Rotary Dimmer, Polar White	1	28342089
Universal Rotary Dimmer Ext, Black Gloss	1	28352045
Universal Rotary Dimmer Ext, Polar White	1	28352089